
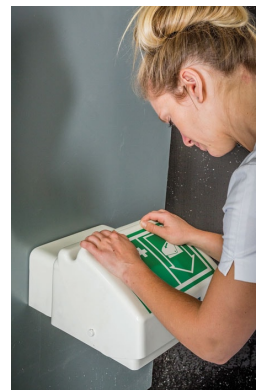


Wall Mount, Closed ABS Bowl, Hughes Eye/Face Wash - 45GEW

Product Images

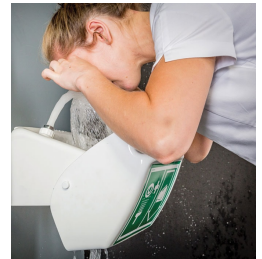

Short Description

HUGHES



Justrite Safety Group

- Covered bowl ensures nozzles and bowl remain clean and free from contamination
- Durable, corrosion-resistant acrylic capped ABS construction
- Twin aerated diffusers provide a soft, scrubbing action to the eyes and face
- Includes a separate universal eye wash sign for enhanced visibility
- Meets ANSI Z358.1 and EN 15154 standards, supports OSHA requirements


Description

Wall-mounted eye/face wash with high, ANSI-compliant flow rate is suitable for use in all applications not subject to the possibility of freezing or overheating. The eye/face wash incorporates an integral lid connected to the water valve for automatic operation—activate by simply pulling down the lid. Easy-to-reach flow regulator valve positioned on side of bowl adjusts to suit the severity of the accident. Includes an inspection record tag for recording service and test history.

Specifications

Model No	45GEW
Color	White
UPC	805042000076
Net Weight, lbs	6.6
Net Weight, kg	3
Dimensions, Exterior	8.9" H x 13.5" W x 14.3" D
Dimensions, Exterior	227mm H x 343mm W x 343mm D
UL Classified to ANSI Z358.1-2014	Yes
Water Inlet Size NPT	1/2 in (F)
Minimum Operating Pressure	2 bar g, 29 PSI
Maximum Operating Pressure	6 bar g, 87 PSI
Water Flow Eye/Face Liters/min	11.4
Water Flow Eye/Face US Gal/min	3
Material Specifications	Eye/facewash diffusers: Chrome plated brass with stainless steel mesh.
Operating Valve Material	Chrome plated brass
Eye/Face Wash Bowl Material	White Acrylic-Capped ABS Plastic
Mounting Type	Wall
Activation Method	Pull Down on Lid
Eye/Face Wash Bowl Interior Dimensions	9.5" W x 8" D
	241mm W x 203mm D
Minimum Ambient Temperature, °F	41
Minimum Ambient Temperature, °C	5
Maximum Ambient Temperature, °F	95
Maximum Ambient Temperature, °C	35

Prop 65

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.